



MODULAR  
**PORCH**  
TILE SYSTEM




INSTALLATION MANUAL

2025



# INSTALLATION **STEPS**

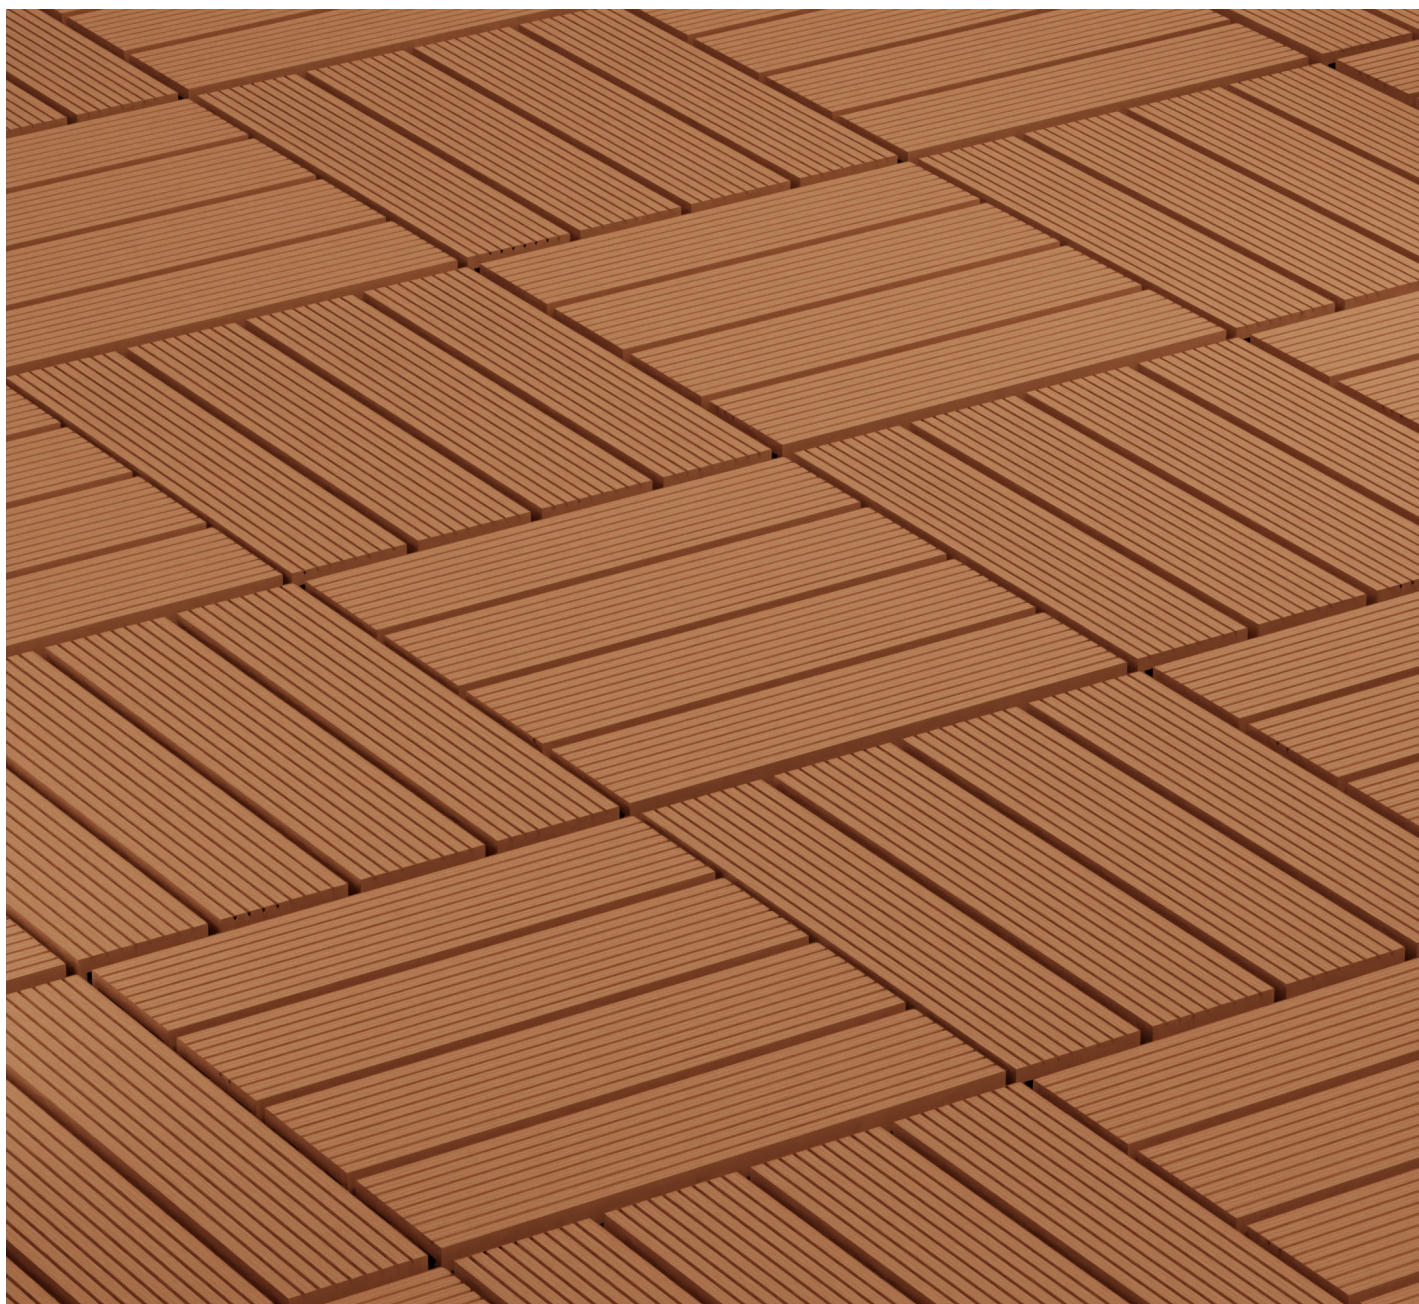

## INSTALLATION MANUAL

Easy Click Composite Deck Tile System  
Tile Size: 300mm x 300mm | Floating Click-Lock Base

## RECOMMENDED ADHESIVE

Use a urethane-based flexible construction adhesive, such as:

- ◆ Sikaflex®-11FC+
- ◆ Bostik® MSP 106
- ◆ Titebond® Fast Set Polyurethane

These adhesives are recommended because they:

- ◆ Remain flexible to absorb thermal expansion/contraction
- ◆ Offer strong bonding to concrete or flat waterproof membranes
- ◆ Are weatherproof and long-lasting in outdoor conditions



# INSTALLATION STEPS

COMPOSITE DECK TILE SYSTEM

## STEP 1:

### LEVEL & PREPARE SUBFLOOR

- ◆ Ensure the surface is flat, solid, and sloped (min 2% slope for drainage).
- ◆ Remove dust, debris, and grease.
- ◆ Acceptable surfaces: concrete slab, rooftop membrane, ceramic tile, or treated sheathing.

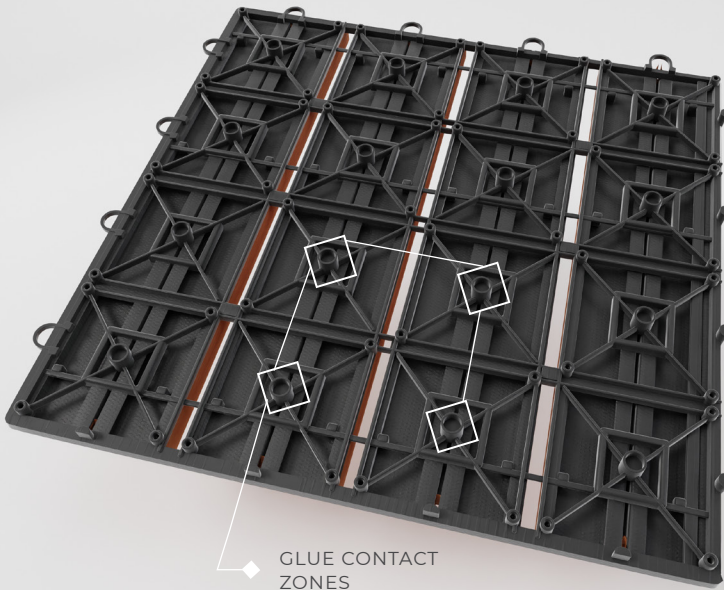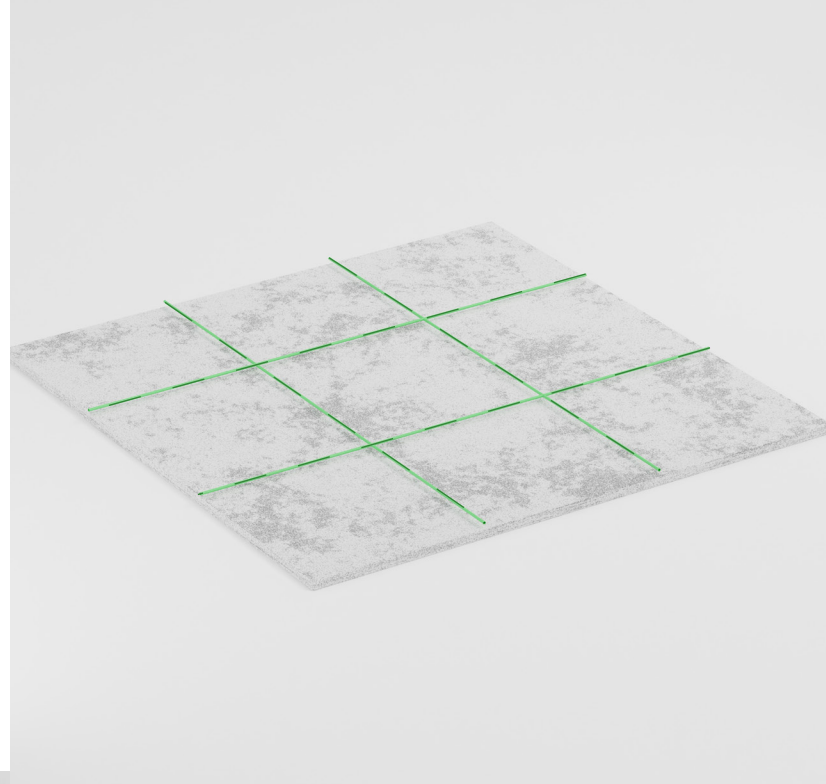

## STEP 2

### APPLY ADHESIVE TO UNDERSIDE ANCHORS

- ◆ Turn the tile over.
- ◆ Apply a small dot of adhesive (size of a dime) directly on the circular anchor posts underneath (see diagram or marked catalog image).
- ◆ Avoid placing adhesive in drainage paths or near locking tabs.



# INSTALLATION STEPS

COMPOSITE DECK TILE SYSTEM

## STEP 3

### CLICK & PLACE TILES

- ◆ Begin from a visible corner of the layout.
- ◆ Gently place the tile over the subfloor and press down.
- ◆ Align adjacent tiles and use the click-lock system to snap them together.
- ◆ Use a utility knife or saw to trim edge tiles as needed. Always wear safety gloves and leave clean, square edges.



3-5 MM  
GAP

## STEP 4

### LEAVE EXPANSION GAPS

- ◆ Leave a 3-5 mm gap between the outermost tiles and any fixed edge: walls, railings, posts, or concrete stops.
- ◆ This allows for thermal movement and prevents buckling.
- ◆ **Optional:** cover gaps with edge ramps or L-trim if needed for aesthetics.

# INSTALLATION **STEPS**

COMPOSITE DECK **TILE SYSTEM**



## MAINTENANCE TIPS

- ◆ Sweep regularly to prevent dirt buildup between slats.
- ◆ Rinse with clean water as needed.
- ◆ Do not use pressure washers or harsh cleaners.





FOLLOW US

#### EMAIL

info@installmasters.ca

#### LOCATION

Unit 2, 290 Industrial Drive,  
Saint John, NB E2R 1A5

#### PHONE

(506)898-1879

1 877 3718808 Ext: 101

(506)261-7152

1 877 3718808 Ext: 102



Website



instagram



facebook



LinkedIn